
 
DEEP ADJUST petit

INSTALLATION INSTRUCTIONS | NOVEMBER 2022

Wire springs



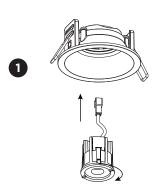







DIMENSIONS

(blade springs)

 




- 1 Put the LED engine in the fixture body by turning a quarter clockwise.
- 2 Make a hole in the ceiling according to the prescribed dimensions.
- 3 POWER CONNECTION

SERIAL CONNECTION - for LED

Always use a power supply according to the specifications of the LED module.




Wire springs: push the springs upwards and insert the fixture in the ceiling hole.

Blade springs: push the springs towards the fixture body and insert the fixture in the ceiling hole.



Driver must be powered off before connecting cables.

 Before connecting the luminaire/LED module to the driver please make sure the driver is not powered but disconnected from the mains. The driver can only be powered when the luminaire/LED module is already connected. Disregarding this instruction might damage or even destroy the luminaire/LED module.





WEVER & DUCRÉ

LIGHTING

DEEP ADJUST petit

INSTALLATION INSTRUCTIONS | NOVEMBER 2022

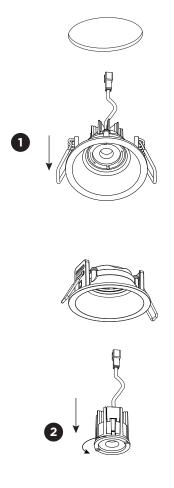

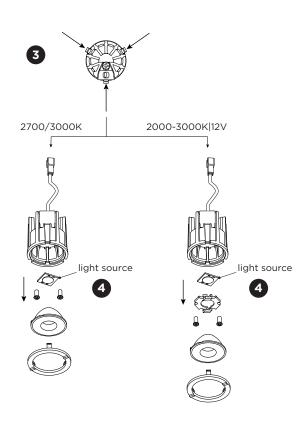



DISMOUNTING AND RECYCLING INSTRUCTIONS

Light source

- 1 Dismount the fixture from the ceiling and disconnect the connector.
- Hold and turn the front ring a quarter counter clockwise to remove the LED module.
- **3** Push at the three points to loosen the front ring and lens.
- 4 Loosen the screws to remove the light source.



The light source is replaceable by an authorized professional.

For advice contact your Wever & Ducré customer service contact point.



This luminaire contains a light source with the energy class E.