 

BOX WALL



Installation method of INTERIOR / EXTERIOR adjustable flap cover The beam angle is adjustable. Before adjusting the flaps, the cover must be mounted.



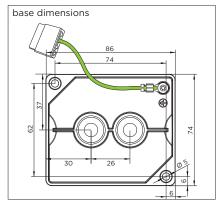

use pin to make hole, not a knife	A	B	
CABLE			
TYPE	ROUND H05RN-F H07RN8-F H07RN-F	ROUND H05RN-F	ROUND
OUTSIDE Ø	min 6.8mm max 8.9mm	min 5mm max 6.8mm	min 1.5mm max 2.6mm
CONDUCTION SECTION	2or3x 0.75mm ² 2or3x 1.0mm ² 2or3x 1.5mm ²	2or3x 0.75mm ² 2x 1.0mm ²	0.75mm ² 1.5mm ²



 
1.0 / 2.0 LED INTERIOR / EXTERIOR



3.0 / 4.0 LED INTERIOR / EXTERIOR

MOUNTING INSTRUCTION

- Remove the mounting base from the LED inset by loosening the socket screws and mount it on the wall with screws (screws are not included).
- POWER CONNECTION




Connect the earth cable.



Please use a matching grommet based on the used 220-240V cable and the corresponding type in the overview table.

 for example:




Push the grommet into the back plate. Pull the cable through the back plate.

Mount the back plate

- Fix the LED inset on the base with the socket screws.
 - Fix the cover to the LED inset by pushing so the ball catch system will fix in the slots.

BOX WALL INSTALLATION INSTRUCTIONS | NOVEMBER 2022

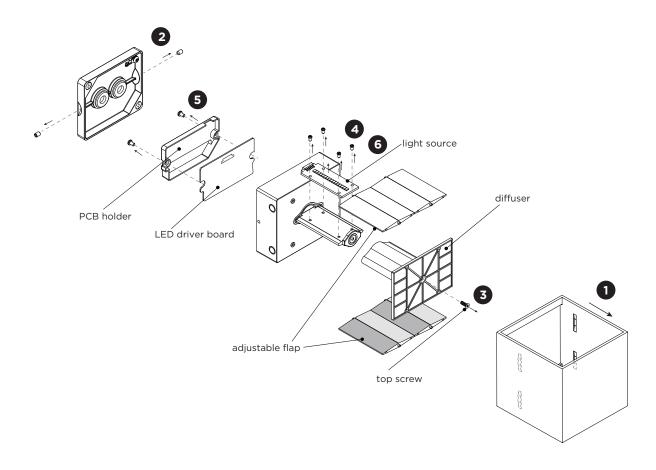



DISMOUNTING AND RECYCLING INSTRUCTIONS Light source

Pull off the cover.

Loosen the socket screws and the wiring, take the LED module from the wall.

Loosen the top screw and remove the adjustable flaps and

Remove the screws from the light source.

Remove the screws from the PCB holder.

Remove the light source by desoldering it from the LED driver



The light source is replaceable by an authorized professional.

For advice contact your Wever & Ducré customer service contact point.

This luminaire contains a light source with the corresponding energy class:

colour temperature	1.0 / 2.0 Energy class	3.0 / 4.0 Energy class
2700K 3000K	A ↑ G	A ↑ G
1800-2700K	A ↑ G	A D