


Signify
I.B.R.S / C.C.R.I. Numero 10461
5600 VB Eindhoven, The
Netherlands
Service Hotline:00800-74454775
© 2021 Signify Holding


Dismantling Recommendation on Disposal at End of Life

A. Composition Explanation – External Driver Slim Downlight

Followed drawings are references only

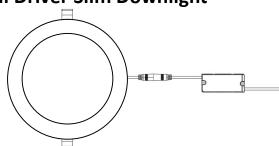

Main Parts

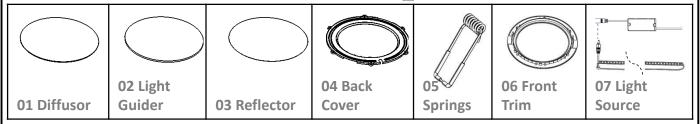

· Other Parts (If included)

The downlight luminaire is considered as a containing product which comprises:

01 Diffusor

The diffusor may have different shapes, such as Round, Square, Rectangle, Dome etc. Taking the Round as Example; The diffusor may have different surface finishing with matte, glossy, plate, 0-100% transparent etc.

02/03 Light guider and Reflector

04 Back Cover

The Back Cover may have different shape and structucres, which is based on design itself

05 Spring

The spring may have different length, width, and plastic cover

06 Front trim

The front trim may also have different shape and material type, which are based on design itself.

07 Light source

The light source is including driver and driver box, PCB with LEDs, AC/DC wires, FM connector

B. Dismantling

Type: Without permanent damage



Signify
I.B.R.S / C.C.R.I. Numero 10461
5600 VB Eindhoven, The
Netherlands
Service Hotline:00800-74454775
© 2021 Signify Holding

Dismantling Recommendation on Disposal at End of Life

C. Recommendation on Disposal


· Plastic part: Reuse and Recycling

• Electrical part: Incineration and disposal


· Metal part: Recycling

D. The Steps to Remove the Components


1 Removing Springs

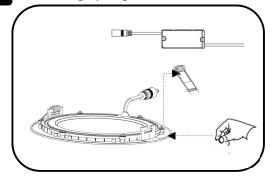


2 Removing Screws

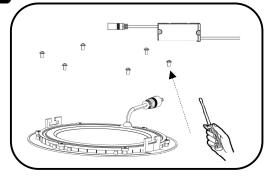

3 Removing all flexible part

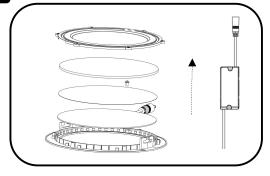

4 Taking light souse out

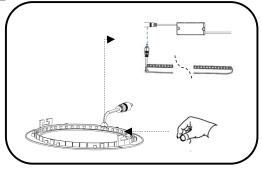

- Please before test, connecting the driver and light source strip with F/M connector
- Expanding evenly the light source strip and manual reconnect wires