# Fun 5DM Design by VERNER PANTON

Please read thoroughly before assembly





### **IMPORTANT!**

ALWAYS TURN OFF THE ELECTRICAL CURRENT BEFORE INSTALLLING ANY FIXTURE!

BE SURE THAT THE CEILING OUTLET BOX IS MOUNTED SO THAT IT CAN CARRY THE WEIGHT OF THE ENTIRE LAMP!


THERE MUST BE NO WEIGHT ON THE ELECTRIC WIRES!

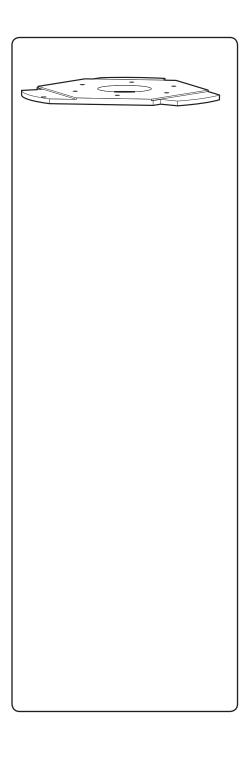

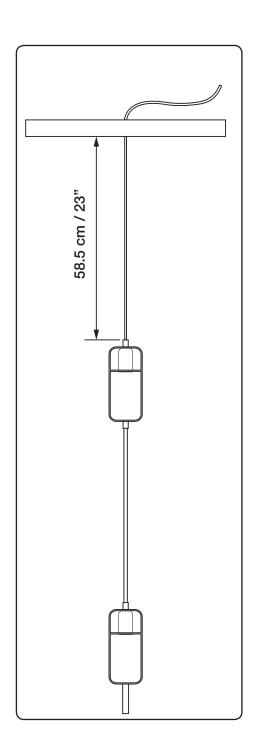


Hang canopy on to ceiling plate, securely installed into ceiling.


Pull the cord through the hole in the ceiling plate. The cord should measure about 58.5 cm / 23" - measured from the plate to the first socket.

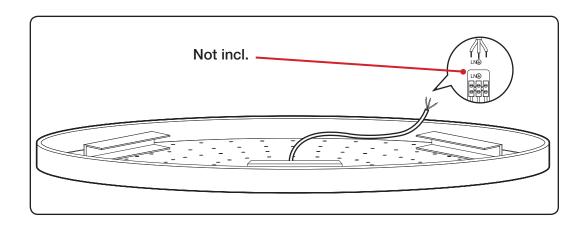


Connect the cord to the outlet in the ceiling.

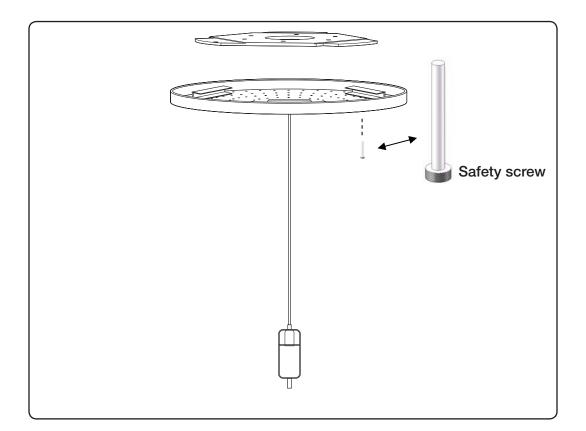

Remember to secure ceiling plate with safety screw to prevent detachment from ceiling plate.

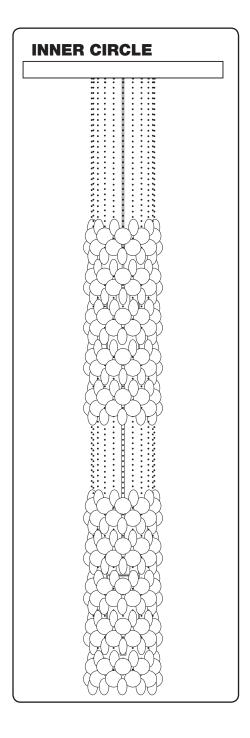

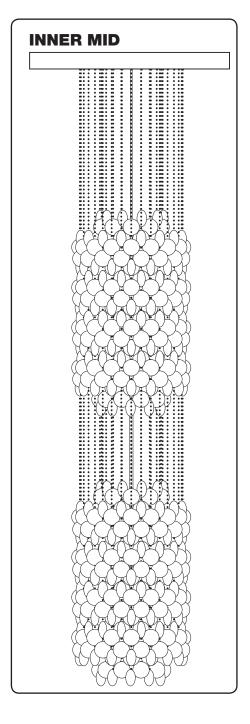

## **INNER CIRCLE**

Mount plates from box with 20 sets totally (two boxes). Box is marked "INNER CIRCLE".


Please note:


The chains in the box are not the same length, so it is important that you alternate between the two lengths.

### **INNER MID**

Mount plates from box with 32 sets totally (two boxes). Box is marked "INNER MID".

Please note:
The chains in the box are not the same length, so it is important that you alternate between the two lengths.

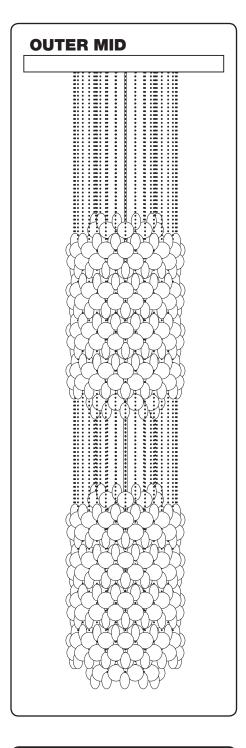

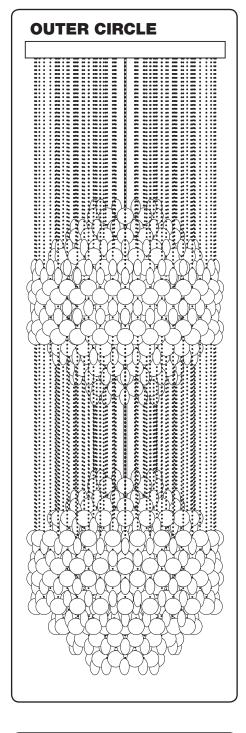

### **OUTER MID**

Mount plates from box with 40 sets totally (two boxes). Box is marked "OUTER MID".

Please note: The chains in the box are not the same length, so it is important that you alternate between

the two lengths.

### **OUTER CIRCLE**

Mount plates from box with 54 sets totally (two boxes). Box is marked "OUTER CIRCLE".

Please note:
The chains in the box
are not the same length,
so it is important that
you alternate between
the two lengths.

# **HOW TO CLEAN:**

Clean with a soft cloth, warm water and a mild detergent. Do NOT use any abrasive materials.

# DESIGNED IN THE PAST MADE FOR TOMORROW

VERPAN ApS

Egeskovvej 29

8700 Horsens

Denmark

www.verpan.com

info@verpan.com