
## **MATCH POINT ceiling recessed**

INSTALLATION INSTRUCTIONS | MAY 2023




Driver must be

connecting cables.

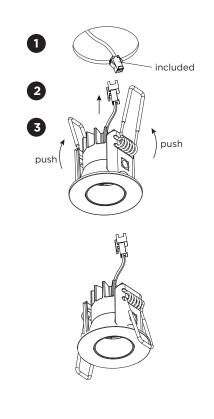

Before connecting the luminaire/LED module to the driver please make sure the driver is not powered but disconnected from the mains. The driver can only be powered when the luminaire/LED module is already connected. Disregarding this instruction might damage or even destroy the luminaire/LED module. powered off before


(1) 220-240VAC driver

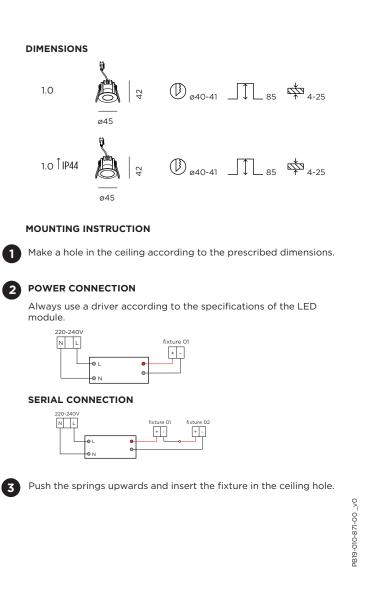

1

## **MATCH POINT ceiling recessed**

INSTALLATION INSTRUCTIONS | MAY 2023

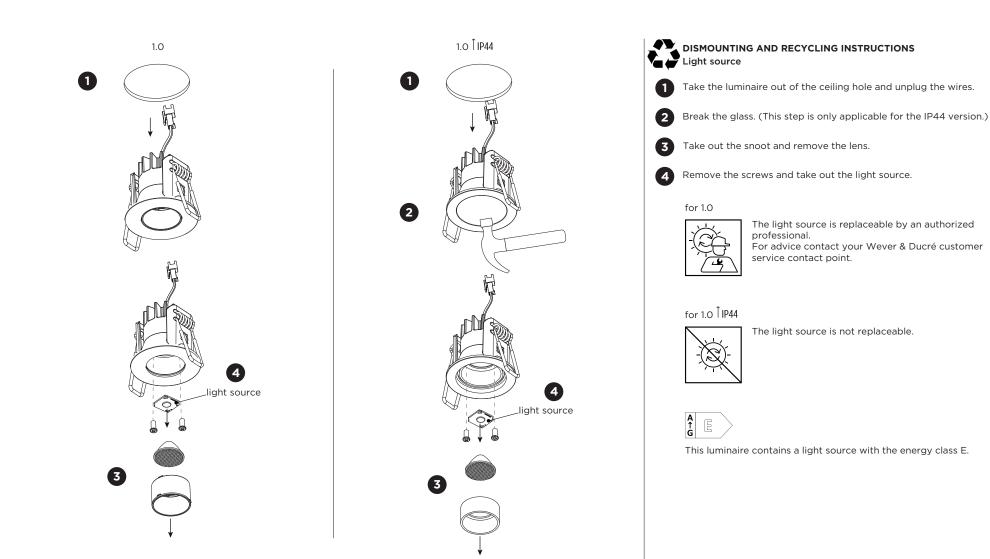

2

