

 
INSTALLATION INSTRUCTIONS | NOVEMBER 2023


installation for 1.0 LED with wire springs

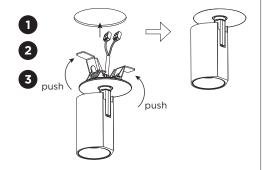

installation for 1.0 LED with blade springs

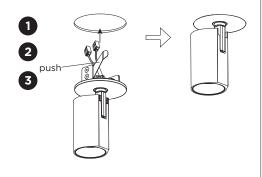



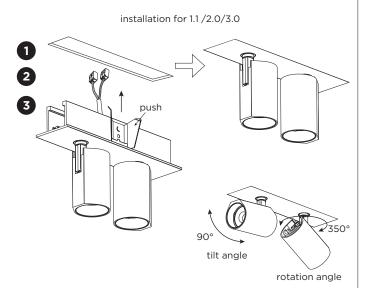


MOUNTING INSTRUCTION

- Make a hole in the ceiling according to the prescribed dimensions.
- 2 POWER CONNECTION

Always use a driver according to the specifications of the LED module.

Single connection

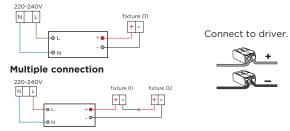

For the spring version: push the springs upward and insert the fixture in the ceiling hole.

For the blade version: push the blades towards the fixture and insert the fixture in the ceiling hole.

DIMENSIONS

1.0 LED with wire springs



1.0 LED with blade springs



1.1 LED with blade springs

 














Only to be installed outside arms reach.




Driver must be connecting cables.

Before connecting the luminaire/LED module to the driver please make sure the driver is not powered but disconnected from the mains. The driver can only be powered when the luminaire/LED module is already connected. Disregarding this instruction might damage powered off before or even destroy the luminaire/LED module.



CENOINSTALLATION INSTRUCTIONS | NOVEMBER 2023

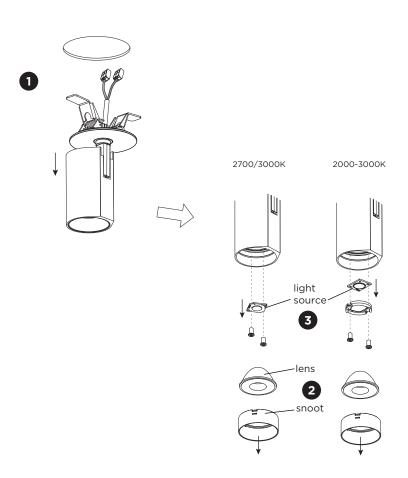



DISMOUNTING AND RECYCLING INSTRUCTIONS

Light source



2 Pull out the snoot and lens.

3 Unscrew the screws and remove the light source.



The light source is replaceable by an authorized professional.

For advice contact your Wever & Ducré customer service contact point.



This luminaire contains a light source with the energy class E.