
PIRRO ceiling recessed

INSTALLATION INSTRUCTIONS | APRIL 2023













Driver must be powered off before connecting cables.

Before connecting the luminaire/LED module to the driver please make sure the driver is not powered but disconnected from the mains. The driver can only be powered when the luminaire/LED module is already connected. Disregarding this instruction might damage or even destroy the luminaire/LED module.



DIMENSIONS

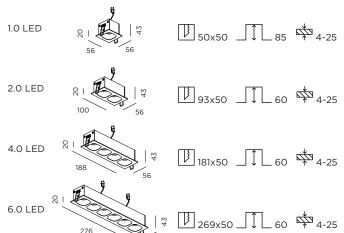


MOUNTING INSTRUCTION


- Make a hole in the ceiling according to the prescribed dimensions.
- POWER CONNECTION

Always use a driver according to the specifications of the LED module.

Single connection



Multiple connection




Push the springs upwards and insert the fixture in the ceiling hole.




PIRRO ceiling recessed

INSTALLATION INSTRUCTIONS | APRIL 2023








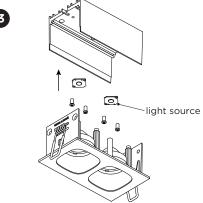



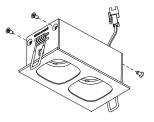



DISMOUNTING AND RECYCLING INSTRUCTIONS

Light source

1 Take the luminaire out of the ceiling hole and unplug the wires.

2 Remove the side screws.

Take off the cover and unscrew the light source(s) to remove it/them.



The light source is replaceable by an authorized professional

For advice contact your Wever & Ducré customer service contact point.



This luminaire contains a light source with the energy class E.