




4 How to reduce the cable length. Loosen the screws from the strain reliefs and pull the cables upwards. Align the marks with the bottom side of the strain reliefs. Mark the cable cutting length. Loosen the cables from the electrical clamps. Reconnect the cables Lock the strain reliefs with the socket screws. Cut the cables according to the actual wiring needs.





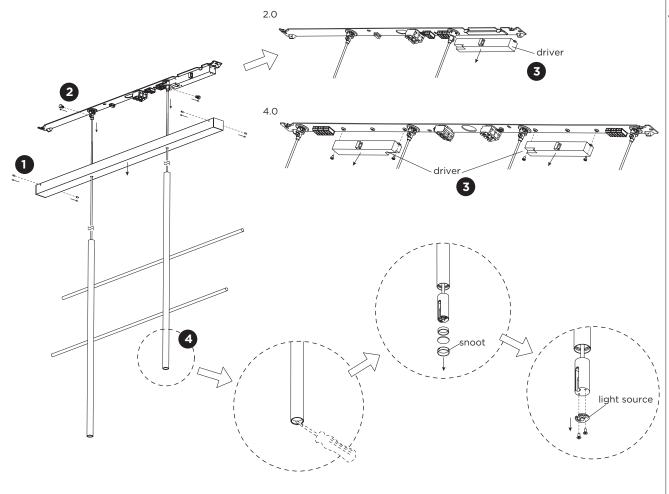

DISMOUNTING AND RECYCLING INSTRUCTIONS

Light source & driver

- Dismount the cover of the ceiling base by loosening the socket screws.
- Loosen the wires, release the socket screws that are locking the cables and separate the cables together with the cover and the lamp tubes combination from the mounting base.
- for 2.0 Pull the driver off. for 4.0 - Loosen the screws to remove the driver(s).
- Remove the snoot(s) with a flathead screwdriver, remove the lens(es) and ring(s), loosen the screws to remove the light source(s).



The driver can be replaced by the end user.



The light source is replaceable by an authorized professional.

For advice contact your Wever & Ducré customer service contact point.



This luminaire contains a light source with the energy class G.

